

FLIGHT MANUAL

DOUGLAS DC-3

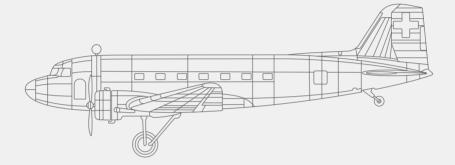

MANUFACTURER: AVIATOR WATCH SA AIRCRAFT TYPE: DOUGLAS DC-3 REFERENCE NUMBERS: V.3.32.0.232.4, V.3.32.0.240.4, V.3.32.0.244.4, V.3.32.0.241.4, V.3.32.0.247.4, V.3.32.0.247.4, V.3.32.0.244.5, V.3.32.0.240.5, V.3.32.0.241.5, V.3.32.0.242.5, V.3.32.0.241.5, V.3.32.0.242.5,

DIMENSIONAL DATA

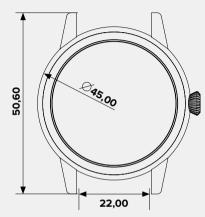

A

50,60

TECHNICAL SPECIFICATIONS

Functions

Hours, minutes, seconds, date

Movement type Automatic, Sellita SW 200-1

Crown


Non screw-locked / two gaskets

Crystal

Sapphire crystal / glare-proofed / scratchresistant

Water resistant 100 M (330 ft)



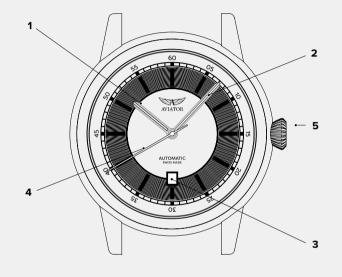

1	Hour hand	Seconds hand	4
2	Minute hand	Crown	5
3	Date display		

11,50

www.aviatorwatch.ch

BASIC FUNCTIONS

STARTING THE WATCH

Your AVIATOR watch is self-winded and has 38 hours power reserve. It means that when the watch is worn, the automatic mechanism will wind the movement. However, if you leave the timepiece for prolonged time and the watch stops, you need to wind the movement by rotating the crown clockwise (approximately 40 revolutions of the crown will be enough, be careful, as the winding mechanism does not have a stop to prevent over winding).

 l_{CAUTION} Always return the crown to position 0 to ensure your watch is water resistant.

DATE SETTING

First, set the time to 12 midnight in order to know the exact starting point of 24 hours. To set the date on your AVIATOR watch, pull the crown to position I, turn the crown forward to choose the correct date. Once the date is set correctly, push the crown to position II and set the time. When you finish the set-up, do not forget to push the crown back to position 0.

If a month has fewer than 31 days, you will need to set the date manually to the first day of the following month.

And the sure you DO NOT set the date between the times 9 PM (21:00) and 3 AM (03:00). It might damage the mechanism.

TIME SETTING

Pull out the crown to position II. This will stop the movement to set the time accurately to the second. It is the best to stop the movement as the seconds hand passes "60". Now move the minute hand a little bit beyond the time to be set. Then adjust the position of minute hand by moving it backward to the correct minute stroke. This ensures that the minute hand starts to move just when you restart the movement. To make the watch working again push the crown back to position 0.

Δ



1	Hour hand	Working position	0
2	Minute hand	Date setting position	I
3	Date display	Time setting position	II
4	Seconds hand		